 


**⚠ WARNING**

Before using the dishwasher, read carefully and follow the safety instructions in the Use and Care Manual.

**ℹ Notice :**

Read the Use and Care Manual prior to operating the dishwasher for the first time.

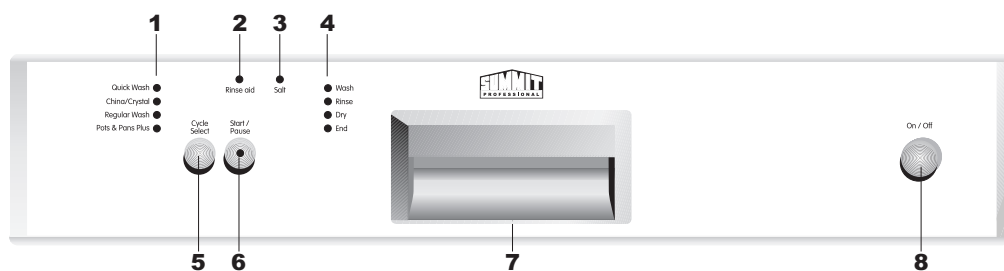

- 1 Program lights
- 2 Rinse aid level indicator light \*
- 3 Salt level indicator light \*
- 4 Program follow up lights
- 5 Cycle Select button
- 6 Start/Pause button
- 7 Door handle
- 8 On/Off button

\* Depending on model

**HOW TO USE YOUR DISHWASHER:**

1. Open the door by pulling the door handle 7.
2. Load the dishwasher.
3. Check that both upper and lower spray arms move freely.
4. Fill enough detergent into the detergent dispenser and close the lid.
5. Use the On/Off button 8 to turn the dishwasher on.
6. Check the rinse aid level indicator light 2. If necessary, refill rinse aid. (depending on model)
7. Check the salt level indicator light 3. If necessary, refill salt. (depending on model)
8. Use the Cycle Select button 5 to choose your washing program.
9. Start the program with the Start/Pause button 6.

10. When the progress indicator light "End" 4 lights up, the wash cycle is completed. Use the On/Off button 8 to turn the dishwasher off.
11. Allow your dishes to cool for 20 minutes, with the door open.
12. Unload the dishes. Begin with the lower rack.

**⚠ CAUTION**


Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. Hot steam can cause burns and other serious injuries. When the door is closed, the program will continue.

**PROGRAM TABLE**

Program number		1	2	3 Reference*	4	
Program name		Quick Wash	China/Crystal	Regular Wash	Pots & Pans Plus	
Temperatures (Wash Rinse)	(°F)	113 - 131	122 - 149	122 - 151	158 - 167	
	(°C)	45 - 55	50 - 65	50 - 66	70 - 75	
Degree of dirtiness		Few	Few	Medium	High	
Detergent in dispenser section	15 ml	+	-	-	-	
	15-25 ml	-	+	+	+	
	+ 5 ml	-	-	+	+	
Recommended detergent amount	Hard water	ml	15-25	25	25-40	40
		tsp	3-5	5	5-8	8
	Medium water	ml	15	15-25	25	40
		tsp	3	3-5	5	8
	Soft water	ml	15	15	15-25	25-40
		tsp	3	3	3-5	5-8
Program process		Main wash ▼ Rinse ▼ Final rinse ▼ End	Main wash ▼ Rinse ▼ Final rinse ▼ Dry ▼ End	Wash ▼ Main wash ▼ Rinse 1 ▼ Rinse 2 ▼ Final Rinse ▼ Dry ▼ End	Wash ▼ Main wash ▼ Rinse 1 ▼ Rinse 2 ▼ Final Rinse ▼ Dry ▼ End	
Duration (minutes)		30	80	110	130	
Water (gallons)		3,3	3,7	5,23	5,5	
Water (liters)		12,4	14	19,8	21	

The consumption values shown in the table were determined under standard conditions. For this reason, deviations are possible under practical conditions.

\* The energy-usage label is based on this program.

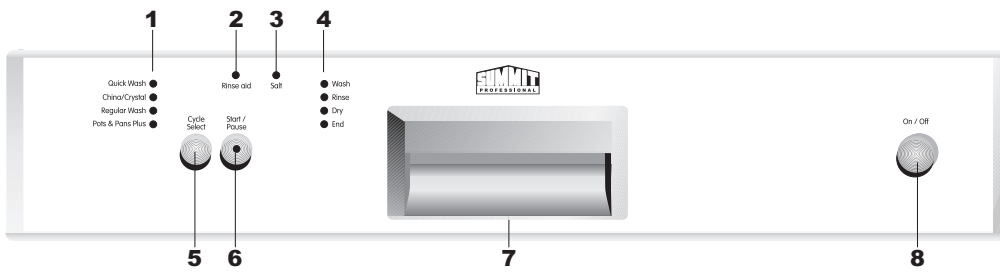

- 1 Program lights
- 2 Rinse aid level indicator light \*
- 3 Salt level indicator light \*
- 4 Program follow up lights
- 5 Cycle Select button
- 6 Start/Pause button
- 7 Door handle
- 8 On/Off button

\* Depending on model

## On/Off button

Turn the dishwasher on with the On/Off button. When turning on, the icon on the display module of the last used program will light up.

## Start/Pause button

Use this button to start the selected program; the light on the button lights up.

Stop the program with the Start/Pause button if you would like to open the door once the dishwasher's washing program is running.

## Cycle Select button

Use the Cycle Select button to select the desired program. The diode of the corresponding program will light up.

## Cancellation of a program

To cancel a program while the dishwasher is running:

1. Press Start/Pause button for 5 seconds. The indicator light will start flashing.
2. The dishwasher will drain the water inside the machine for 45 seconds.
3. The program is cancelled when indicator light goes off.
4. You can then choose and start a new program.

## ⚠ WARNING

Depending on the stage of the program you have cancelled, there may be detergent residue or rinse aid inside the machine and on the dishes. Make sure the items in the dishwasher are not used before washing properly. Ingestion or inhalation of detergent or rinse aid may cause serious injury. Avoid contact with skin and eyes and keep children and infirm persons away from these materials.

## Program change

To change a running program:

1. Press the Start/Pause button. The indicator light on the button will turn off.
2. Select a new program and start it with the Start/Pause button. The respective program diode lights up.

## ⚠ CAUTION

The new program will NOT start right from the beginning. It will start from the stage last carried out by the previous program selection.

## ⚠ WARNING


Depending on the length of the terminated program detergent and rinse aid may still be in the dispensers. Ingestion or inhalation of detergent or rinse aid may cause serious injury. Avoid contact with skin and eyes, and keep children and infirm persons away from these materials.

## 1 Program selection via diode lights




## 2 Rinse aid level indicator light (depending on model)

If this indicator light comes on, you need to refill rinse aid. You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser. When the color is light, open the dispenser and refill rinse aid.

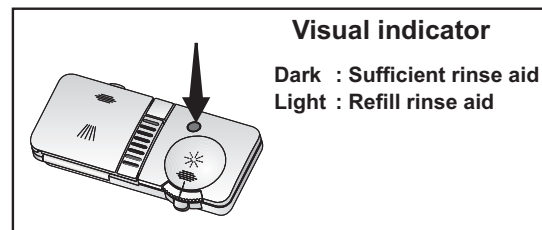


## 3 Salt level indicator light (depending on model)

When this indicator light comes on, you must refill special salt. The salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container. When the color is light, open the container and add dishwasher salt.

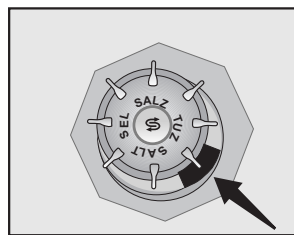

## 4 Program follow up lights

During the washing process, the individual active program segments are shown by the program follow up lights.

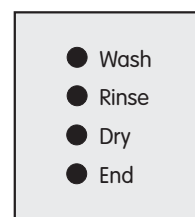

### Notice :

- When using the 30 minutes quick wash program, the program follow up light for drying does not light up.
- The washing process is only complete when the program follow up light "End" lights up.