

SUMMIT

HOTEL BOX

Model HBOX168



Instruction Manual

FELIX STORCH, INC.
770 Garrison Avenue
Bronx, New York 10474
www.summitappliance.com

Introduction

The SUMMIT® Hotel Box HBOX168 is designed to cut down the noise of the refrigerator in your room by turning off the refrigerator while you are sleeping, or at other times that you can select yourself. If you choose the **16 8 Sound & Sleep Saver** mode, the refrigerator's compressor will turn off every night at 11:00 PM and turn on again at 7:00 AM.

WARNING: *If you choose the 16 8 mode, it is not safe to keep perishable food and medicine in the refrigerator overnight.*

Installation

The HBOX168 should be placed on top of the refrigerator. Leave at least 2" of space around it to allow for proper ventilation, and do not place anything on top of the unit.

1. Plug the HBOX168 into a convenient wall socket.
NOTE: The minimum amperage to the box has to be at least as large as the amperage to the refrigerator.
2. Plug the refrigerator into the HBOX 168.
3. Set the time and mode (see *Operation* section).

Electrical Connection:

⚡Warning⚡

Improper use of a grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized service center.

- The HBOX168 box should be properly grounded for your safety. Its power cord is equipped with a three-pin plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.
- Do not under any circumstances cut or remove the third ground prong from the power cord supplied.
- The HBOX168 requires a standard 115Volt AC ~ 60Hz electrical outlet with three-prong grounded receptacle.

- To prevent accidental injury, the cord should be secured behind the refrigerator and not left exposed or dangling.
- Never unplug the box by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.
- Do not use an extension cord with the HBOX168. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

Operation

Setting the time:

1. Press **SET TIME** once. By default the clock is set to AM. To change to PM, press – (negative sign).
2. Press **SET TIME** to confirm the setting. This activates the HH (hour) on the clock, and you can press either + or – to adjust accordingly.
3. Press **SET TIME** to confirm. This activates MM (minutes) and you can adjust accordingly using the +/- buttons.
4. Finally, press **SET TIME** once more to confirm all settings.

Modes:

By default, the HBOX168 operates in *NORMAL* mode. You will see the word **On** in the window below the time display. (**On** means the refrigerator will be operating around the clock, and you can switch to full-time operation by pressing the **NORMAL** button at any time.)

By pressing the **16 8 Energy & Sleep Saver** button, you put the unit into *16 8* mode. This means the refrigerator will shut off at 11:00 PM every night and will start up again at 7:00 AM. This not only saves energy, but eliminates the noise of an operating refrigerator during the night.

If you want to turn the refrigerator off completely, press the **OFF** button. The word **Off** will appear in the mode window.

IMPORTANT: Perishable food or medicine should not be left in the refrigerator overnight when in the **16 8** mode, or at all if in the **Off** mode.

Limited Warranty

ONE YEAR LIMITED WARRANTY FOR HBOX168

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. The cabinet is warranted to be manufactured to commercially acceptable standards, and is not covered from damage during handling or breakage.

Mail-In Service: If your unit needs repair, you can mail it back to us and we will either repair it or send back a new unit. Mail to **Warranty Repair Dept.** at address below.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken glass shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Expenses for travel and transportation for product service in remote locations.
7. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES – LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

FELIX STORCH, INC.
770 Garrison Avenue
Bronx, NY 10474
Phone: (718)-893-3900
Fax: (844)-478-8799
www.summitappliance.com

The logo for Summit Appliance, featuring the word "SUMMIT" in a bold, blocky, sans-serif font. The letters are black with a white outline, giving it a three-dimensional appearance.

For parts and accessory ordering,
troubleshooting and helpful hints, visit:
www.summitappliance.com/support

Printed in China