


# SUMMIT DW18 PANEL INSTRUCTIONS

This unit ships with a stainless steel panel pre-installed on the door. If you are planning to install your own custom panel, you must first follow the instructions below to safely remove the existing panel.

1. Open the door with the stainless steel panel still attached.
2. Place a box or some other form of support under the door, as the panel will be detached and may fall to the floor upon release.
3. Remove the (10) screws labeled in the top view of the door below as A, B, & C  
A = long screws  
B = short screws  
C = medium screws

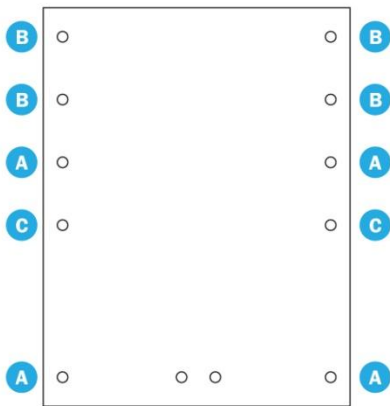

NOTE: Do NOT remove the screws that hold the lock in place at the top of the door

4. Detach the panel mounting bracket from the door and allow the door to close.
5. Detach the ground wire from the screw used to hold the handle in place.
6. Detach the panel from the bracket by removing the (4) screws labeled "E".
7. Reattach the ground wire to the metal framing of the door, or reattach as you install the handle .
8. Attach your handle to the panel.
9. In order to attach your custom panel to the dishwasher, refer to **Page 16** of the **Installation Manual** included with this unit.