



IMPORTANT INFORMATION ABOUT YOUR ICEMAKER

This unit's main power switch is located in the kickplate, not the rear as stated in your use & care manual. In the event of flashing lights or an audible alarm, turn this main power switch off and wait 30 seconds before turning it back on.



Power switch located in kickplate on the right side

The alarms may indicate that you have a kink or blockage in your drain hose. Check the installation to prevent any leakage.

If you require technical support, please call our service department at **718-893-3900 ext. 597** or email **techsupport@summitappliance.com**