





## TWO-ZONE WINE CELLAR

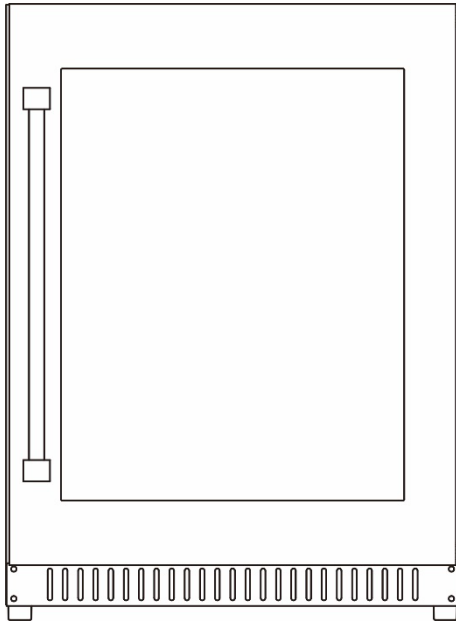

**ALWC532PNR  
DBWC24134ADA**

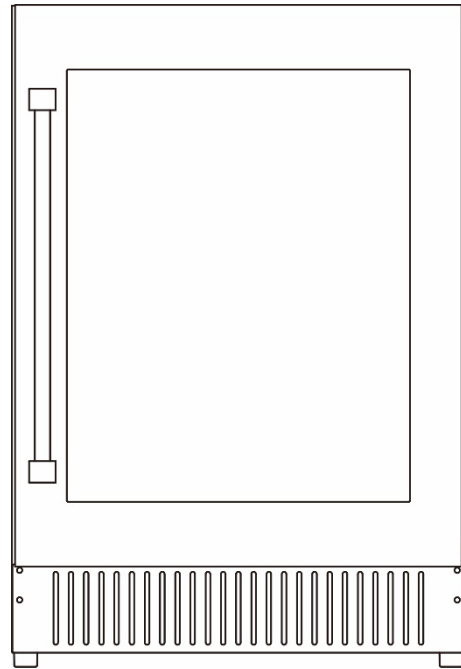

**SWC532BLBISTPNR  
DBWC24133**

### *User Manual*

**BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.**

*Write Model and Serial Numbers here:*

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

**Felix Storch, Inc.**  
An ISO 9001:2015 registered company  
770 Garrison Ave  
Bronx, New York 10474  
[www.summitappliance.com](http://www.summitappliance.com)

# TABLE OF CONTENTS

<b>Appliance Safety</b>	<b>3</b>
<b>Important Safeguards</b>	<b>3-4</b>
<b>Location of Parts</b>	<b>5</b>
<b>Installation Instructions</b>	<b>6-11</b>
<i>Before Using the Appliance</i>	6
<i>Installation of your Appliance</i>	6
<i>Electrical Connection</i>	6-7
<i>Built-in Under-counter Instructions</i>	7-8
<i>Anti-tip Bracket Installation</i>	8
<i>Installation of the Handle</i>	9
<i>Reversing the Door Swing</i>	9
<i>Panel Ready Installation</i>	10-11
<b>Operating your Appliance</b>	<b>12-13</b>
<i>Control Panel</i>	12
<i>ON/OFF Power</i>	12
<i>Lock</i>	12
<i>Light</i>	12
<i>Setting the Temperature</i>	12
<i>Temperature Conversion</i>	13
<b>Care and Maintenance</b>	<b>14</b>
<i>Cleaning your Appliance</i>	14
<i>Power Failure</i>	14
<i>Transporting your Appliance</i>	14
<i>Energy-Saving Tip</i>	14
<b>Troubleshooting</b>	<b>15</b>
<b>Limited Warranty</b>	<b>16</b>

# APPLIANCE SAFETY

**Your safety and the safety of others are very important.**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the Safety Alert Symbol. The symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the word **DANGER** or **WARNING**.



**DANGER** means that failure to heed this safety statement may result in severe personal injury or death.



**WARNING** means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.

All safety messages will alert you about the potential hazard, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

---

## IMPORTANT SAFEGUARDS



Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance, follow basic precautions, including the following:



- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- Replace all panels before operating.
- It is recommended that a separate circuit serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- These appliances are CFC- and HFC-free and contain small quantities of Isobutane (R600a) which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect. Care must be taken during transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can ignite and may damage the eyes.
- In the event of any damage:
  - Avoid open flames and anything that creates a spark,
  - Disconnect from the power source,

- Air the room in which the appliance is located for several minutes, and
- Contact the Service Department for advice.
- The more coolant there is in an appliance, the larger the room in which it should be installed. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every ounce of coolant, at least 325 cubic feet of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance. It is hazardous for anyone other than an Authorized Service Person to carry out servicing or repairs to this appliance.
- Take serious care when handling, moving, and using the appliance to avoid either damaging the refrigerant tubing or increasing the risk of a leak.
- Replacing component parts and servicing shall be done by factory-authorized service personnel to minimize the risk of possible ignition due to incorrect parts or improper service.

## **WARNING**

FOLLOW THE WARNING CALLOUTS BELOW ONLY IF APPLICABLE TO YOUR MODEL

- Use two or more people to move and install the appliance. Failure to do so can result in back or other injuries.
- To ensure proper ventilation for your appliance, the front of the appliance must be completely unobstructed. Choose a well-ventilated area with temperatures above 50°F (10°C) and below 100°F (38°C).
- The appliance should not be located next to ovens, grills, or other sources of high heat.
- The appliance must be installed with all electrical, water, and drain connections in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances, is required.
- Do not kink or pinch the power supply cord of the appliance.
- The size of the fuse (or circuit breaker) should be 15 amperes.
- It is important that the appliance be leveled in order to work properly. You may need to make several adjustments to level it.
- All installations must be in accordance with local plumbing code requirements.
- Make certain that the pipes are not pinched, kinked, or damaged during installation.
- Check for leaks after connection.
- Never allow children to operate, play with or crawl inside the appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Use this appliance only for its intended purpose as described in this User Manual.
- Keep fingers out of the “pinch point” areas. Clearances between the drawers and cabinet are necessarily small. Be careful closing drawers when children are in the area.

## **DANGER**

### ***Risk of child entrapment!***

Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they will “just sit for a few days.”

Before discarding your old appliance:

- Take off the doors
- Leave the shelves in place so that children may not easily climb inside.

**- SAVE THESE INSTRUCTIONS -**

**CALIFORNIA CARB/SNAP DISCLOSURE**


**This product uses eco-friendly hydrocarbon refrigerant and fully complies with California CARB regulations.**

However, we are required by California law to provide the following disclosure statement in every product sold in California:

*"This equipment is prohibited from use in California with any refrigerants on the 'List of Prohibited Substances' for that specific end-use, in accordance with California Code of Regulations, title 17, section 95374. This disclosure statement has been reviewed and approved by Felix Storch, Inc. and Felix Storch, Inc. attests, under penalty of perjury, that these statements are true and accurate."*

This product does **not** use any refrigerants on the 'List of Prohibited Substances'"

# LOCATION OF PARTS

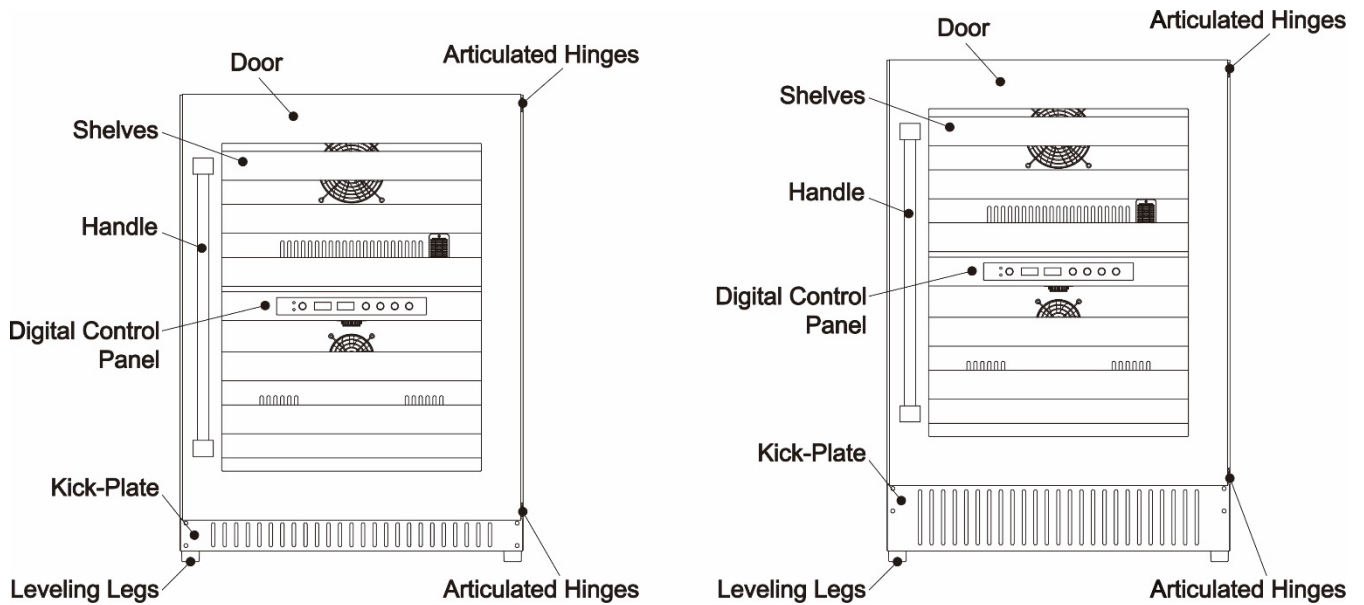

# INSTALLATION INSTRUCTIONS

## Before Using Your Appliance

- Remove the exterior and interior packing.
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water, using a soft cloth. Then, dry thoroughly.
- Install the handles on the drawers if they are not already attached.

## Installation of Your Appliance

- This appliance is designed for free standing or built-in (fully recessed) installation. This unit can be installed indoors or outdoors.
- Place your appliance where the floor is strong enough to support it when it is fully loaded. To level the appliance, adjust the front leveling legs.
- For free-standing installation, 5" (127mm) of space between the back and sides of the appliance, and 4" (102mm) at the top, are suggested. This allows the proper air circulation to cool the compressor and condenser. For built-in installation, keep ¼" (6.35mm) of space between the top and sides of the appliance, and 2" (51mm) at the rear. Make sure the air vent at the front of the appliance is never covered or blocked in any way.
- Avoid locating the appliance in moist areas.
- Plug the appliance into an exclusive, properly grounded wall outlet.

**NOTE:** When the product is installed, there should be a small ventilation gap between the top of the appliance and the underside of any fitting above (1/4" or 6mm).

## Electrical Connection



### WARNING

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a qualified electrician or an authorized service center.

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug, which mates with standard three-prong wall outlets to minimize the possibility of electrical shock.

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord supplied. For personal safety, this appliance must be properly grounded. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.

This appliance requires a standard 115/120 Volt AC ~60Hz three-prong grounded electrical outlet. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.

The appliance should always be plugged into its own individual electrical outlet, which has a voltage rating that matches the rating label on the appliance. This provides the best performance and prevents overloading house wiring circuits, which could cause a fire hazard from overheating. Never unplug the appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle. Immediately repair or replace all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

## Extension Cord

Due to potential safety concerns under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.


## Built-in Under-counter Instructions

Make sure your installation does not block the front ventilation grille. The unit is designed to fit under worktops, using the height-adjustable ventilation grille to ensure that the feet are concealed from front view.


If the unit is fully integrated to be installed for fitting kitchen plinth, make sure that the ventilation gaps in the plinth are at least 300 square centimeters and remove the ventilation grilles, so that warm air can disperse unhindered. Otherwise, the appliance has to work harder, resulting in an increase in electricity consumption.

**NOTE:** When pushing the appliance into the niche, make sure that the mains cable does not get trapped.

**Models:** ALWC532PNR, DBWC24134ADA

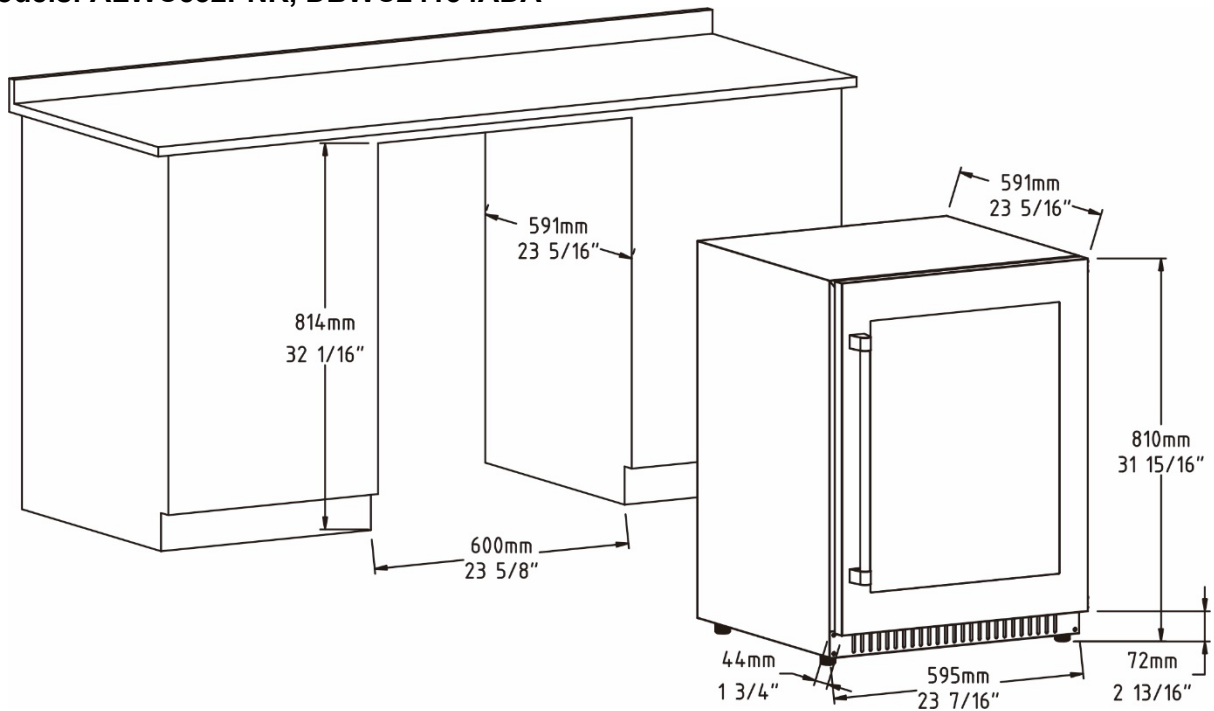

Models: SWC532BLBISTPNR, DBWC24133

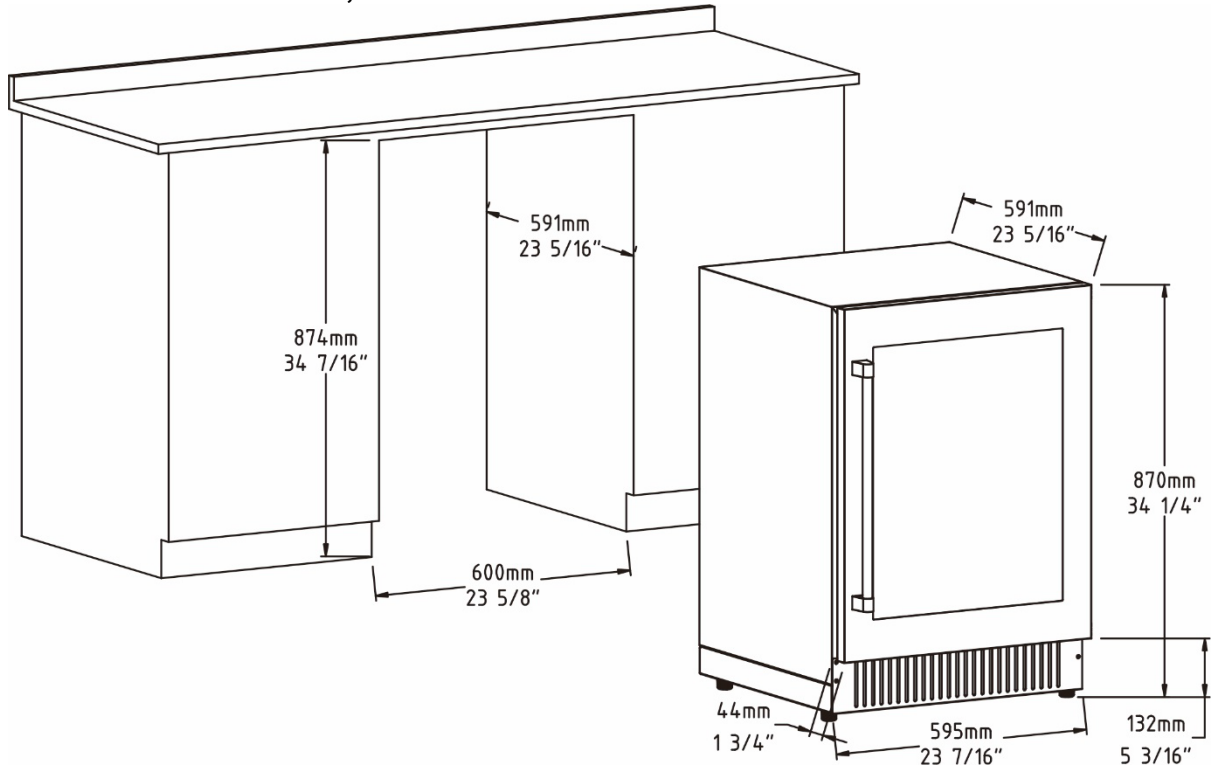


### Anti-Tip Bracket Installation


To reduce the risk of tipping the appliance by abnormal usage or improper loading, the appliance must be secured by properly installing the anti-tip bracket packed with the appliance.

1. Place the anti-tip bracket on the floor as shown in the figure to the right.
2. Mark the locations of the 8 holes of the anti-tip bracket on the floor.
3. Use an 11/50" masonry drill bit and insert plastic anchors.
4. Secure the anti-tip bracket to the floor, using screws.
5. Slide the appliance into position, and make sure the leg engages the anti-tip bracket.

Anti-tip Bracket

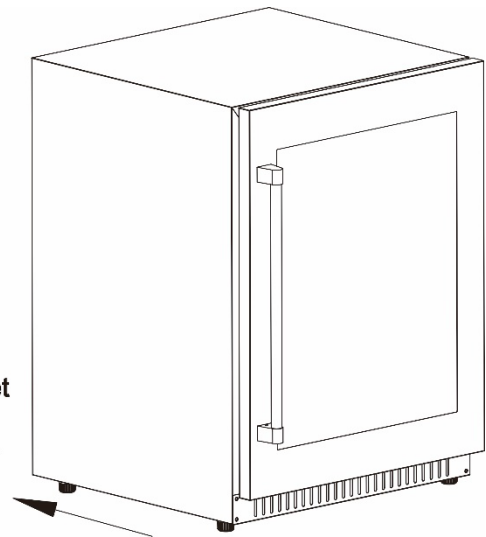

The measurements for the anti-tip bracket installation are illustrated below:

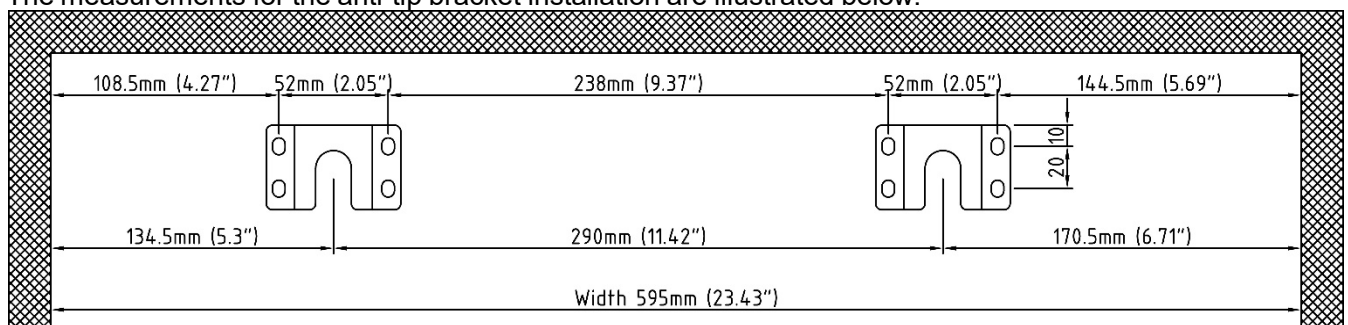


**NOTE:** If the appliance is relocated, the bracket must be removed and installed in the new location.



## Installation of the Handle (Optional)

If you are not installing a panel over the door frame and would like to use the provided handle on the stainless steel door trim, follow the instructions below:

1. Place the handle② over the 2 mounting studs① on the door frame with the set screws③ pointing down.
2. Push the handle tightly against the door and tighten both of the 2 set screws③ with the Allen key④.
3. Keep the Allen key in a safe place for future use.

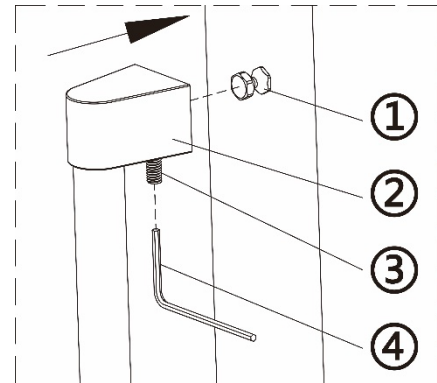

## Reversing the Door Swing

This appliance has the capability of the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening direction, please follow the instructions below:

1. Open the door.
2. Remove the screws from the upper and lower left corners of the unit using a Philips screwdriver. (Fig.1)
3. Remove the two screws of top and bottom hinge using a Philips screwdriver. (Fig.2)  
**WARNING: To prevent the door from falling off, it must be held by one person before the screws are loosened by a second person.**
4. Rotate the door 180°, align the hinge over screw hole and slide into position. Tighten screws on top and bottom.
5. Remove the lock latch from the top of the door and reinstall it in the center mounting hole at the bottom of the door.
6. Reinstall the previously removed screws back into the upper and lower right corners of the unit.

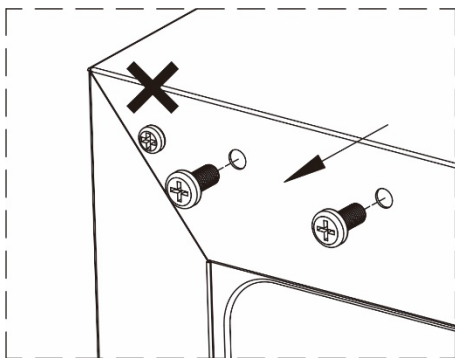


Fig.1



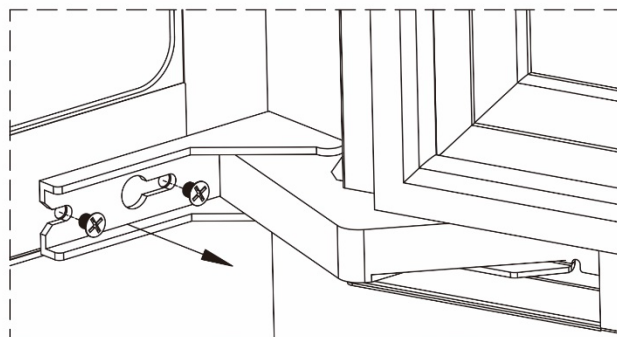






Fig.2

## Panel Ready Installation

The appliance is designed to be panel ready. To install a custom panel on the front of the doors of your appliance, follow the steps below:

Overlay Panel Dimension:	
Door Panel Width:	587mm ( 23 1/8" )
Door Panel Height:	742mm ( 29 1/4" )
Door Panel Depth:	19mm ( 3/4" ) max
Door Panel Weight:	10 lb. max
Viewable Area Width:	451mm ( 17 3/4" )
Viewable Area Height:	569mm ( 22 3/8" )

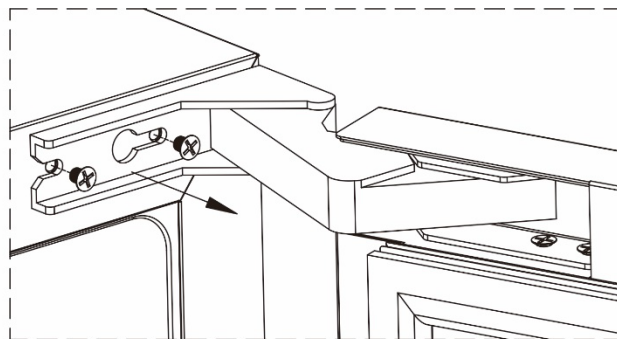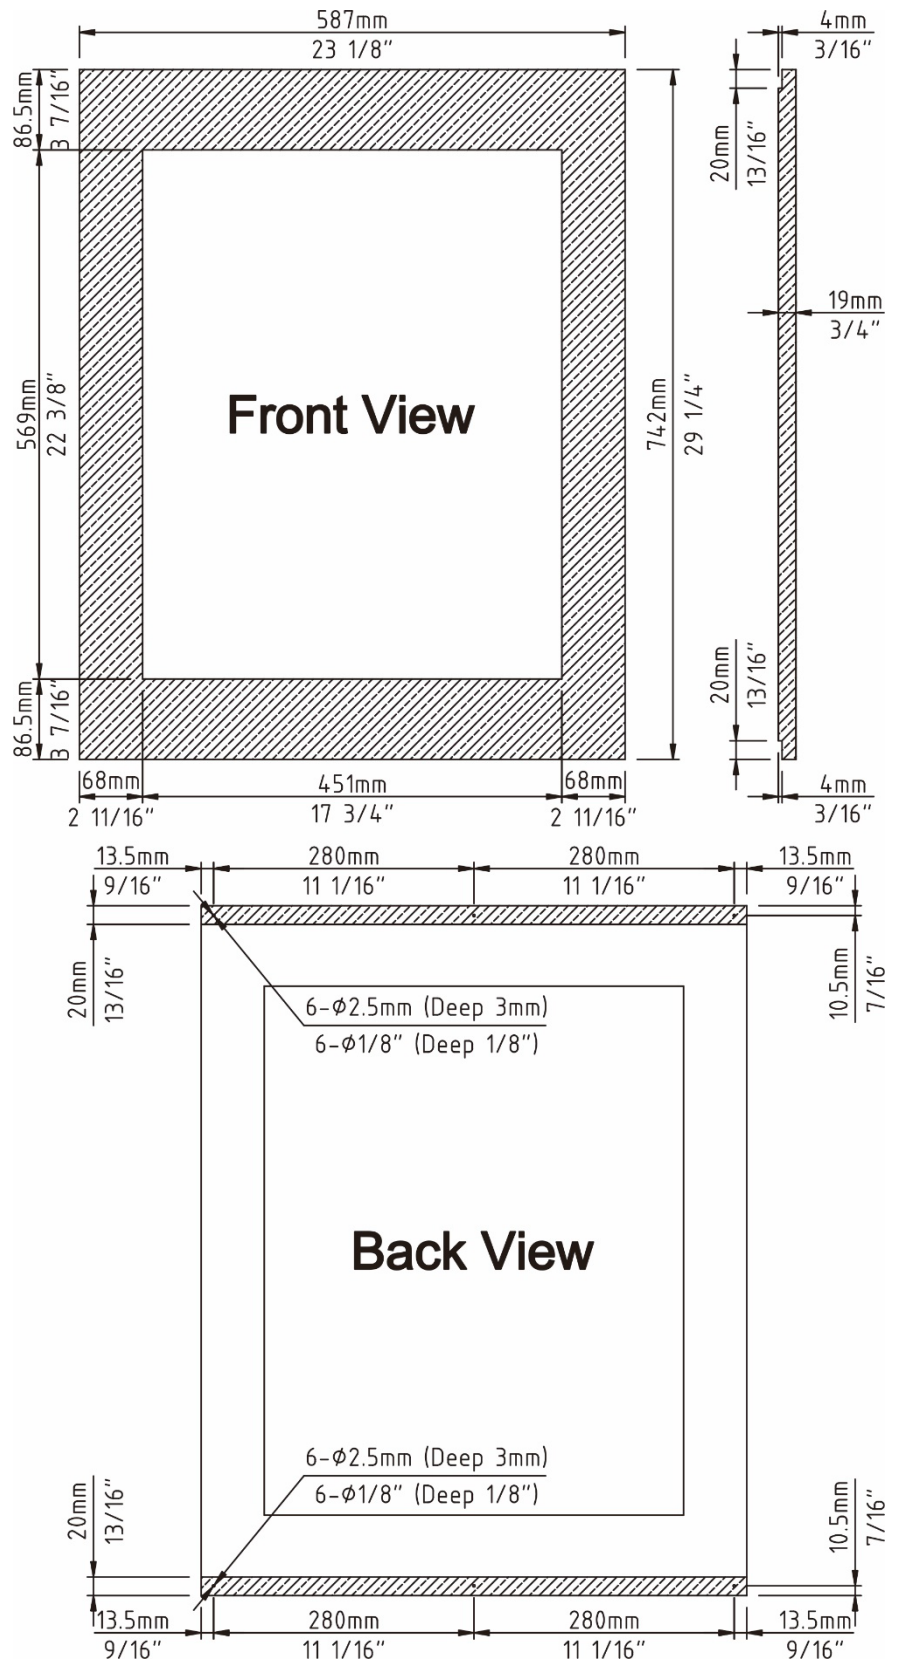

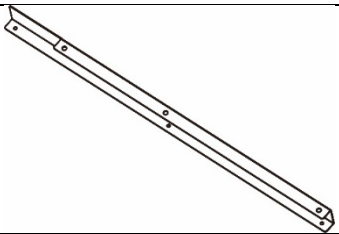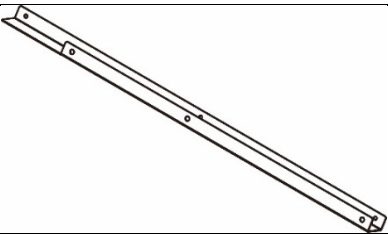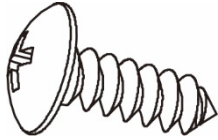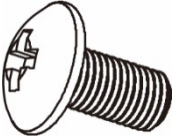Included in the bracket kit			
			
Top bracket (1)	Bottom bracket (1)	Phillips self-tapping screw (6)	Phillips screw (6)

### Installing the Bracket & Full Overlay Panel Installation

1. Lay the wooden panel (3) on a flat surface.
2. Place the top bracket and bottom bracket along the edge of the panel.
3. Attach the bracket to the wooden panel by using Phillips self-tapping screws. (Fig.1)
4. Open the door and remove the handle.
5. Push the installed wooden panel, in the direction of the door. (Fig.2)
6. Push into place and secure with Phillips screw. (Fig.3)

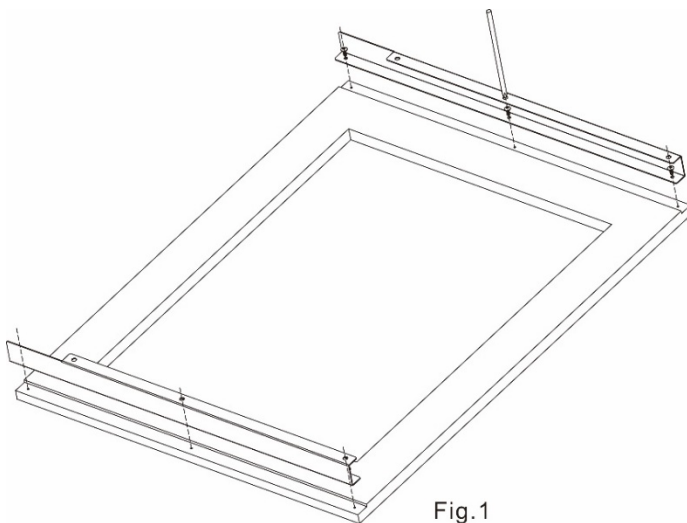


Fig.1

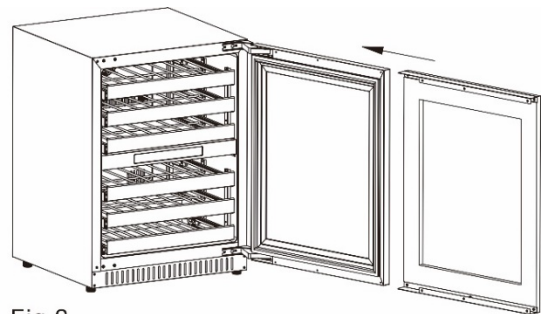


Fig.2

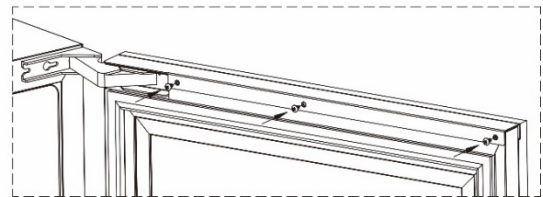


Fig.3

### Installing the handle on the overlay panel

If reusing the handle that came with the unit:

1. Unscrew the studs located on the front face of the door and set them aside for later use.
2. Remove the screws from the door and proceed to mark their positions on the overlay panel by using the handle as a guide.
3. Use a 3/16" (5mm) drill bit to make the holes on the overlay panel for the screws.
4. Insert the screws, making sure to leave the head of the screw flush with the surface of the panel (countersink screws if necessary).
5. Take the studs you saved in Step 1 and screw them back. They are now projecting from the face of the panel.
6. Place the handle over the mounting studs and, using the supplied Allen key, tighten the securing grub screws to fix the handle. Refer to "Installation of the Handle" (Refer to page 9).

### If using a customer supplied handle(s):

1. Attach the handle to the overlay panel by using flat head or countersunk screws.
2. Unscrew the studs located on the front face of the door and save them for later possible use.

# OPERATING YOUR APPLIANCE

## Recommended Temperatures for Chilling Wine

Red Wines: 59 ~ 64.4°F (15 ~ 18°C)


Dry / White Wines: 48.2 ~ 57.2°F (9 ~ 14°C)

Sparkling Wines: 41 ~ 46.4°F (5 ~ 8°C)

The cabinet temperature may vary slightly depending on whether or not the interior light is ON or OFF, and whether the bottles are located in the upper/middle or lower section of the cabinet.

## The Controls of Your Appliance

The appliance should be placed where the ambient temperature is between 16 - 35°C (61 - 95°F). If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extremely cold or hot conditions may cause interior temperatures to fluctuate.

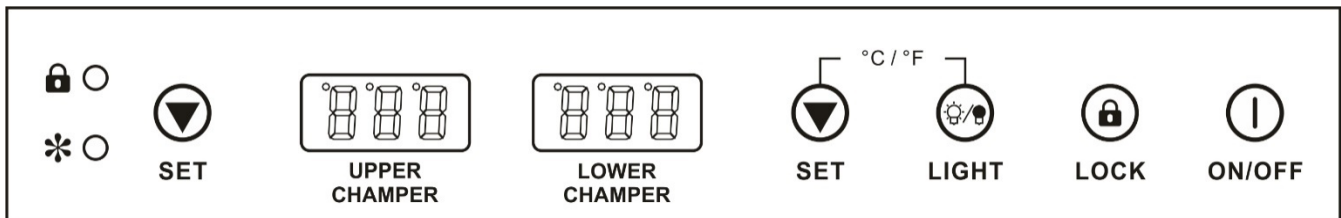

### **ON/OFF Power**

To turn the appliance on or off, press the **ON/OFF** button for 3 seconds.

### **LOCK**

If you press and hold the button for 3 seconds, the control panel will lock and cannot be operated again until the button is pressed again. After that, it will operate normally.

### **LIGHT**



You can turn the interior light ON or OFF by pushing the button marked **LIGHT**. The light will turn off automatically if it remains ON for 10 minutes. Pushing the **LIGHT** button again will turn the light back on. For optimum storage of wine, keep the light off except when viewing.


### **Setting the Temperature**

Upper zone adjustable temperature: 41°F to 50°F (5°C to 10°C)


Lower zone adjustable temperature: 50°F to 64°F (10°C to 18°C)

**NOTE:** For optimal performance, the difference of temperatures set in the two zones should be with the range 39.2°F ~ 46.4°F (4~8°C)

Set the desired temperature by pressing the corresponding buttons, Left  or Right  to decrease. Each press is in 1-degree increment. Once released, set temperature will flash for approximately 5 seconds then revert back to display the internal temperature.

To view your set temperature, press either  button once and LED display will flash set temperature for 5 seconds.

## Temperature Conversion

The appliance has the capability to display temperature in either Celsius or Fahrenheit. To change the temperature scale, press and hold both the  and **LIGHT** buttons simultaneously for approx. 3 seconds.

### **RUN**

Indicator light illuminates to signify the cooling mode is currently in operation.

### **LOCK**


If illuminated, indicates the control panel is locked.

### **NOTES:**

If the unit is unplugged or turned off, or if there has been a power failure, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the appliance will not start.

When you use the appliance for the first time, or restart it after it has been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the display. This is normal and due to the length of inactivation time. Once the appliance has been running for a few hours, everything will be back to normal.

You may notice condensation on the outer surface of the glass door. This occurs when water vapor from the air contacts the cold surface of the door and the vapor condenses on the glass, causing a fogging effect. In extreme situations, water can even drip off the door, indicating excessive humidity in the environment.

If the appliance has been off for less than 5 minutes, the compressor will not restart at once when  is pressed. This behavior is built into the control system to protect the compressor.

### **Bottle Storage & Capacity**

Wine bottles can vary in size and shape, and the stated capacity may not apply to every varietal. For a detailed view showing how your shelves can best accommodate different types of bottles, visit your product on our website and open the “Shelving Guide” included in the Downloads section.

---

# CARE AND MAINTENANCE

## Cleaning Your Appliance

- Turn off the power, unplug the appliance, and remove all items.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should consist of about 2 tablespoons of baking soda to a quart of water.
- Wring excess water out of the sponge or cloth when cleaning the area of the controls or any electrical parts.
- Wash the exterior of the cooler with a warm solution of mild liquid detergent. Rinse well and wipe dry with a clean, soft cloth.

## Power Failure

Most power failures are corrected within a few hours. If your power is going to be off for a longer period of time, you need to take the proper steps to protect the contents of your refrigerator.

## Transporting Your Appliance

If you need to move your appliance once the box has been discarded:

1. Securely tape down all loose items inside your appliance.
2. Turn the adjustable legs up to the base to avoid damage.
3. Be sure the appliance stays secure in an upright position during transportation. Also, protect the outside of the appliance with a blanket or similar item.

## Energy-Saving Tip

The appliance should be in the coolest area of the room, away from heat-producing appliances and out of direct sunlight.

# TROUBLESHOOTING

You can solve many common problems easily, saving you the cost of a service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

PROBLEM	POSSIBLE CAUSE	REMEDY
Appliance does not operate.	<i>The appliance defrosts automatically in normal operating conditions. The appliance is turned off. Tripped circuit breaker or a blown fuse.</i>	<i>Connect the appliance. Switch on the appliance. Switch on the circuit breaker or replace the fuse.</i>
The appliance is not cold enough.	<i>The temperature is not set correctly. The ambient temperature could require a lower temperature setting. The condenser is too dirty. The ventilation opening is blocked or too dusty.</i>	<i>Check the set temperature. Set a lower temperature. Clean the condenser when necessary. Clear the obstructions and wipe off the dust.</i>
The appliance turns itself on and off frequently.	<i>The room temperature is higher than average. A large number of bottles have been added to the appliance.</i>	<i>Put the appliance in a cooler place. Leave the appliance to work for a while until the set temperature has been reached.</i>
The light does not work.	<i>The appliance is not connected to a power supply. A tripped circuit breaker or a blown fuse. The light was switched off on the control panel.</i>	<i>Connect the appliance. Switch on the circuit breaker or replace the fuse. Switch on the light.</i>
Vibrations	<i>The appliance is not properly leveled.</i>	<i>Level the appliance with adjustable feet.</i>
The appliance seems to make too much noise.	<i>The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your appliance. If temperature fluctuations occur, the contraction and expansion of the inner walls may cause popping and crackling noises.</i>	
	<i>The appliance is not properly leveled.</i>	<i>Level the appliance with adjustable feet.</i>
Display "E1", "E2".	<i>"E1" or "E2" indicates that the air temperature sensor has failed.</i>	<i>Call for service.</i>
LED displays "HH", the alarm is ringing	<i>The unit's internal temperature is higher than 86°F (30°C).</i>	<i>Unplug the appliance and re-plug after 5 minutes. If the alarm and LED do not change back, contact customer service.</i>
LED displays "LL", the alarm is ringing	<i>The unit's internal temperature is lower than 32°F (0°C).</i>	<i>Unplug the appliance and re-plug after 5 minutes. If the alarm and LED do not change back, contact customer service.</i>
There is a difference between the temperature inside the appliance and the temperature shown on display.	<i>The appliance is being turned on for the first time, after a restart, or a long period out of operation.</i>	<i>This is normal, leave the appliance running for several hours and the temperature will stabilize, if this does not happen, contact customer support.</i>

If you have checked the table above and find that you still need help with your appliance, call our Customer Service facility at **800-932-4267 (Ext. 513)** between 9:00 AM and 5:00 PM ET or visit [www.summitappliance.com/support](http://www.summitappliance.com/support). We will do our best to answer your questions.



# LIMITED WARRANTY

## ONE-YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves, and cabinets are warranted to be manufactured to commercially acceptable standards and are not covered from damage during handling or breakage.

## 5-YEAR COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

### **ITEMS WARRANTOR WILL NOT PAY FOR:**

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for appliances operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

## DISCLAIMER OF IMPLIED WARRANTIES – LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.



**WARNING:** This product can expose you to chemicals including Nickel (Metallic) which is known to the State of California to cause cancer.

For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

Note: Nickel is a component in all stainless steel and some other metallic compositions.

**Felix Storch, Inc.**  
An ISO 9001:2015 registered company  
770 Garrison Ave  
Bronx, New York 10474  
[www.summitappliance.com](http://www.summitappliance.com)

# SUMMIT®

For parts and accessory ordering,  
troubleshooting, and helpful hints, visit:  
[www.summitappliance.com/support](http://www.summitappliance.com/support)

Revised 08-21-24  
Printed in China